



**BEAMZ**  
**MADE**  
**EAZY**

150.675 V1

**LCB366 LED PANEL**  
**QUICK **START** GUIDE**

# DMX CHANNELS


## 16 CHANNELS

| CHANNEL | FUNCTION                          | VALUE   | DESCRIPTION  |
|---------|-----------------------------------|---------|--|
| 1       | Master dimmer                     | 000-255 | Dimmer 0-100%  |
| 2       | SMD LEDs                          | 000-005 | No function  |
|         |                                   | 006-255 | Strobe from slow to fast                             |
| 3       |                                   | 000-255 | Red 0-100%   |
| 4       |                                   | 000-255 | Green 0-100%   |
| 5       |                                   | 000-255 | Blue 0-100%  |
| 6       | WW LEDs                           | 000-255 | White 0-100%   |
|         |                                   | 000-005 | No function  |
| 8       | Selection folder                  | 006-255 | Strobe from slow to fast                             |
|         |                                   | 000-015 | No function  |
|         |                                   | 016-075 | Letters  |
|         |                                   | 076-135 | Number & Symbols                                     |
|         |                                   | 136-195 | Pattern  |
| 9       | Letters<br>(if Channel 8 : 16-75) | 196-255 | Effect pattern                                       |
|         |                                   | 000-004 | A  |
|         |                                   | 005-009 | B  |
|         |                                   | 010-014 | C  |
|         |                                   | 015-019 | D  |
|         |                                   | 020-024 | E  |
|         |                                   | 025-029 | F  |
|         |                                   | 030-034 | G  |
|         |                                   | 035-039 | H  |
|         |                                   | 040-044 | I  |
|         |                                   | 045-049 | J  |
|         |                                   | 050-054 | K  |
|         |                                   | 055-059 | L  |
|         |                                   | 060-064 | M  |
|         |                                   | 065-069 | N  |
|         |                                   | 070-074 | O  |
|         |                                   | 075-079 | P  |
|         |                                   | 080-084 | Q  |
|         |                                   | 085-089 | R  |
|         |                                   | 090-094 | S  |
| 095-099 | T                                 |         |  |
| 10      |                                   | 100-104 | U  |
|         |                                   | 105-109 | V  |
|         |                                   | 110-114 | W  |
|         |                                   | 115-119 | X  |
|         |                                   | 120-124 | Y  |
| 11      |                                   | 125-129 | Z  |
|         |                                   | 130-255 | No function  |
|         |                                   | 000-005 | Effect Pattern, Stop                                 |
|         |                                   | 006-125 | Effect Pattern speed slow to fast, clockwise         |
|         |                                   | 126-255 | Effect Pattern speed slow to fast, counter clockwise |
|         |                                   | 000-127 | No function  |
|         |                                   | 128-255 | Effect pattern, fade                                 |

| CHANNEL | FUNCTION   | VALUE   | DESCRIPTION                              |
|---------|--|---------|--|
| 12      | Pattern rotation                                 | 000-015 | Turn 0°                                  |
|         |  | 016-031 | Turn 45°                                 |
|         |  | 032-047 | Turn 90°                                 |
|         |  | 048-063 | Turn 135°                                |
|         |  | 064-079 | Turn 180°                                |
|         |  | 080-095 | Turn 225°                                |
|         |  | 096-121 | Turn 270°                                |
|         |  | 122-127 | Turn 360°                                |
|         |  | 128-191 | Turn 0°-360 from slow to fast, clockwise |
| 192-255 | Turn 0°-360 from fast to slow, counter clockwise |         |  |
| 13      | SMD LEDs   | 000-255 | Invert dimmer 0-100%                     |
| 14      |  | 000-255 | Invert dimmer 0-100%                     |
| 15      |  | 000-255 | Invert dimmer 0-100%                     |
| 16      | WW LEDs  | 000-255 | Invert dimmer 0-100%                     |

## CONTROL MENU

| MENU               |             |             | DESCRIPTION  |  |
|--------------------|-------------|-------------|--|--|
| <b>DMX ADDRESS</b> | A000-Axxx   |             | Set DMX start address                              |  |
|                    | <b>MODE</b> | DMX         | 16CH   | Select desired DMX mode  |
|                    |             | 144CH       |  |  |
| Auto               |             | Pro00-Pro39 | Select auto mode program                           |  |
|                    |             | Sp00-Sp99   | Speed control of program in the auto mode          |  |
| Sound              |             | Pro00-Pro39 | Select sound mode program                          |  |
|                    |             | Se00-Se99   | Sensitivity control of program in the auto mode    |  |
| Slave              |             |             | Enables slave mode                                 |  |
| <b>SETTING</b>     |             | Display     | ON / OFF   | Enables to switch off the backlight during periods of inactivity |
|                    |             | Display rev | ON / OFF   | Enables to reverse display                                       |
|                    |             | DMX Fail    | Black out  |  |
|                    | Sound       |             |  | Enables music control by DMX signal interruption                 |
|                    | Auto        |             |  | Enables auto mode by DMX signal interruption                     |
| <b>SYSTEM INFO</b> | Hold        |             | Last command is held by DMX signal interruption    |  |
|                    | Firmware    | Vx.x        | Software version                                   |  |
|                    | Time Info   | xxH         | Operating hours since manufacture (non resettable) |  |
|                    | Temperature | xxC         | Head PCB temperature                               |  |

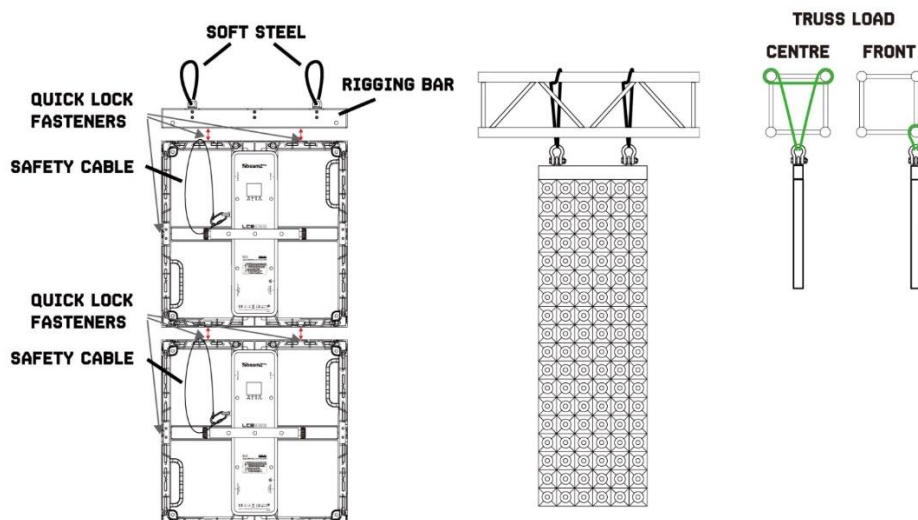



# BEAMZ

**YOUR FUTURE**  
**YOUR SKILLS**  
**YOUR PLATFORM**  
**YOUR PARTY**  
**YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

